 


Multifunctional portable rechargeable battery speaker

POWER ACOUSTIK®

THE INSTRUCTIONS

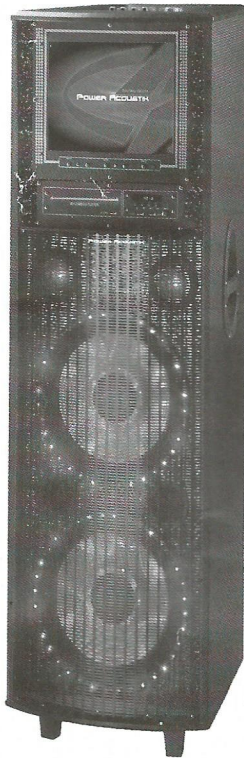


MODEL:PPA-1212K

Note: because of the products constantly updated, and we keep without prior notice to the product to the change, change of power.


Made in China

Welcome you to buy our company products the series active speakers. this product can provide you with the good quality, Please read the details of the instruction manual before you use, in order to exert its best performance and avoid unnecessary loss. please call our company inquires directly if you don't understand any place.

Panel Graph:

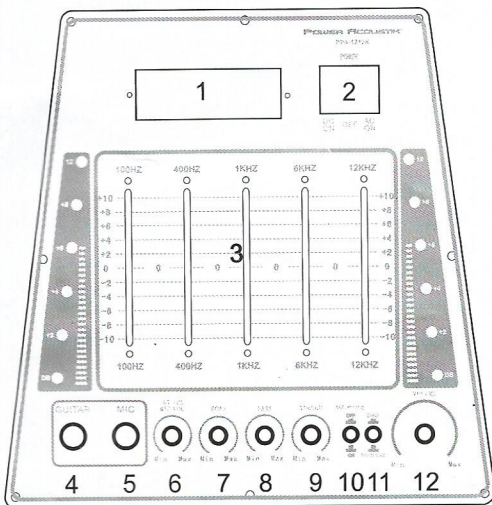


- 01. The Mp3 panel
- 02. The power switch(ON/OFF/AC.DC charging)
- 03. The five sections balance adjustment
- 04. Electric guitar input jack
- 05. Mic jack
- 06. Electric guitar/mic volume
- 07. The receiver reverberation regulation
- 08. Music bass adjustment
- 09. Music high regulation
- 10. The microphone switch priority
- 11. Audio input selection
- 12. Themusic volume

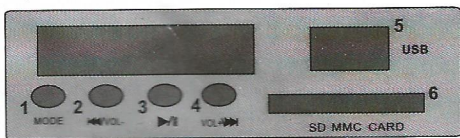


- 1. Mode conversion(USD/SD with short press; FM with short press; Bluetooth with short press; start recording with long press, end of recording with short press)
- 2. For MP3 mode, previous song with short press. For FM mode, previous channel with short press. Volume reduce with long press
- 3. PLAY/SCAN: (FM state; short -cycle according to the selected table, automatic search platform, automatic save table,play recording file with long press)
- 4. For MP3 mode, next song with short press. For FM mode, Next channel with short press. Volume increase with long press.
- 5. USB card jack
- 6. SD/MMC card socket

Amplifiers back panel USB panel diagram:


01. The battery display
02. The LED lamp switch
03. The AC power input jack
04. The AC power switch
05. External DC 12V power supply
06. Charge indicator
07. An external video input / DVD video output
08. The MP5 video output
09. External audio input
10. The DVD audio output

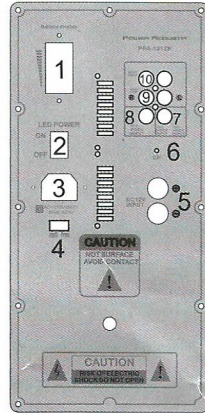

Remote control manual

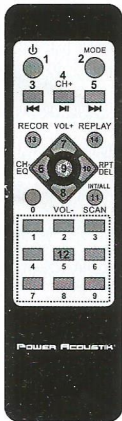

01. :Standby state
02. **MODE**:Mode conversion (USB/AUX/FM/Bluetooth)
03. :Previous song with short press. For FM mode, manual search channel backward which has signal with long press
04. / **CH+**:Play/Pause in MP3 mode. For FM mode, to the next channel with short press
05. :Next song with short press. For FM mode, manual search channel forward which has signal with long press
06. :For MP3 mode, change EQ adjustment with short press. For FM mode, to the previous channel with short press
07. :Vol+ Volume increase
08. :Vol - Volume reduce
09. :Mute
10. :Repeated a song in MP3 mode, cancel recording file with long press
11. **SCAN/INTI/ALL**:For FM mode, automatic search channel with one press. The channel will automatic saved in the system
12. **0-9** directly select the channel which has saved in the system already
13. **RECOR** :Recording
14. **REPLAY** :Replay

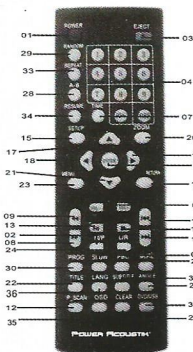


01. Power
02. P/N
03. Open/Close
04. 1-10, 10+: the number choosing key
05. Show
06. Volume
07. Time setup
08. Forward
09. Rewind
10. Previous
11. Next
12. P_SCAN
13. Play/Pause
14. Stop
15. Setup
16. Return
17. The up direction in DVD mode
18. The left direction in DVD mode
19. The right direction in DVD mode
20. Enter
21. The down direction in DVD mode
22. Display title screening DVD mode NCD 20 disc
23. The down direction in DVD mode button
24. L/R
25. Angle
26. Zoom
27. Clear
28. Repeat the program A-B.
29. Rand
30. Prog
31. USB
32. Copy
33. Repeat
34. Resume
35. OSD
36. LANG



A B C D E

- A. The power witch
- B. Simulation options -
- C. The menu
- D. Simulation option +
- E. Input selection

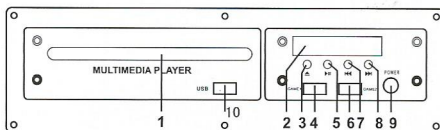

- 1.The DVD disc slot
- 2.LED Display
- 3.OPEN/CLOSE button
- 4.Game stick input 1
- 5.Play/pause button
- 6.Game stick input 2
- 7.Previous song
- 8.Next song
- 9.Power switch

Installation and use instructions:

1. Before turning on the unit, please put all the volume adjustment to the minimum, and then turn on the power switch access audio signal source, turn main volume to appropriate location.
2. If you want to use a microphone, please correct connection microphone interface, the regulation again a microphone (wireless microphone) volume and reverberation effect (use guitar function method of use above).
3. MP3, please insert USB or SD card or other audio cable, USB and SD card in play after for first.

*Bluetooth instructions:

In the Bluetooth state: press MODE conversion key set in BT Bluetooth MODE, the LED screen display, PPA-1212K, and cell phone Bluetooth device connected to the Bluetooth set to open, and then began to search audio equipment, find some confirmation after connecting equipment; After completion of connection can enter the multimedia broadcast songs; In the Bluetooth play state, can use the panel or the remote control of the play/pause, a song, a song, volume +, volume - button control cell phone play software.

Note: Bluetooth connection for one-on-one, MP3 have connection phone equipment must first disconnect Bluetooth connection to and another cell phone equipment connection; For some low version (version 2.0 the) with Bluetooth phone, for the first time connection some needs input connection verification code 0000; For higher than 3.0 version of the mobile phone with Bluetooth does not need to enter verification code

*NFC Function:

If your phone have the NFC function, that you just put your phone to the sensor. (Where have the NFC sticker on the unit). It will be automatic connect, not need password.

*Record Function:

Speaker can record the sound of music from microphone, FM radio, or AUX sound sources. and Save the record file in USB or SD card.

Operation as below :

- 1 .Put the USB or SD card on speaker.
- 2.Connect with microphone to speaker or turn to FM radio to play. or connect AUX and play
- 3.Long press "M " button to record, after record finish, press 'M' again to save the file.
- 4.Press 'Play' to play the recorded file.