

POWER ACOUSTIK®

USER MANUAL

PPA-2100L



PROFESSIONAL SPEAKER

PLEASE READ THIS USER MANUAL CAREFULLY BEFORE SYSTEM CONNECT

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.




1. Protection of electric power supply line: Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
2. Ventilation: This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
3. Casing Dismantling: DO NOT dismantle the casing. If one touches the inner components, he will probably get serious electric shock.
4. Unusual smell: When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plug from the outlet on the wall. Contact the sell shop or nearest repairing center.

Attention: This set applies to AC 110V~240V/50Hz~60Hz power supply. Use standard power supply. Pls be sure for the correct power supply before use it.

1-1 PRODUCT FEATURES

1. High output power;
2. With Karaoke function;
3. The treble is clear, natural and bass is powerful;
4. Compatible to DVD/VCD/CD/TAPE/MP3/MP4/AUX

2-1 FRONT PANEL FUNCTION INSTRUCTION

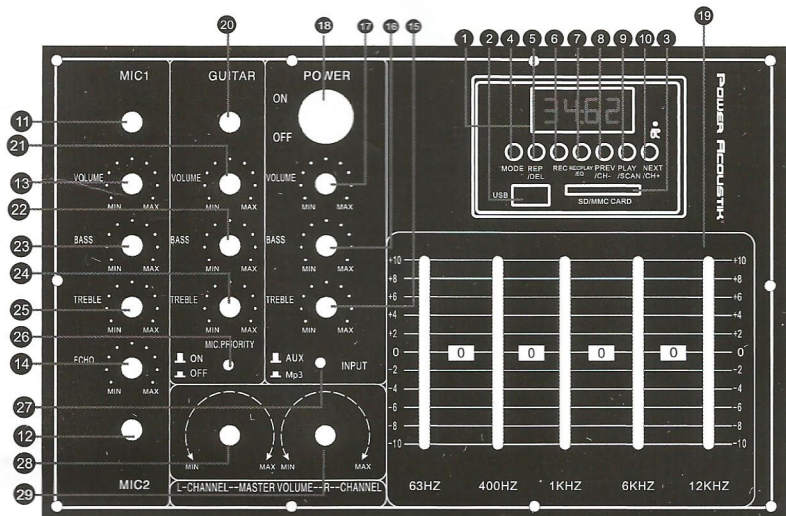

- 1.LED display
- 2.USB input
- 3.SD /MMC input
- 4.MODE:USB/SD/Line (Audio input)
/FM /Bluetooth switch button
- 5.Repeat /Del
- 6.RECORD
7. RECAPLAY/EQ: play the recorded file/EQ
- 8.MP3 prev/ FM CH- button
- 9.MP3 play/ pause/FM scan
- 10.MP3 next/ FM CH+ button
- 11.MIC 1 input
- 12.MIC 2 input
- 13.MIC VOL
- 14.ECHO
- 15.TREBLE
- 16.BASS
- 17.VOLUME
- 18.POWER SWITCH
- 19.Equalizer
- 20.Guitar input
- 21.Guitar Volume
- 22.Guitar bass
- 23.MIC bass
- 24.Guitar treble
- 25.MIC treble
- 26.MIC PRIORITY button
- 27.AUX /Mp3 input audio switch button
- 28.L- CHANNEL MASTER VOLUME
- 29.R-CHANNEL MASTER VOLUME



Remote control

- STAND BY Mp3 standby
- MODE USB/SD/Line (Audio input)
/FM /Bluetooth switch button
- Mp3 prev/ FM CH- button
- Mp3 play/pause button /
FM tuner
- Mp3 next/ FM CH+ button
- Mp3 repeat button/ Delete
- FM Scan button
- Mp3 volume up button
- Mp3 volume down button
- Mute button
- Mp3 eq button
- Mp3 number button
- RECORD Recording button
- REPLAY Replay button

Blue tooth Use Instruction:

change the mode into "BLUE", the bluetooth sign light twinkles, and speaker have sound "di".
Set on mobilephone, connect to Bluetooth data, search equipment and match properly.
The proper connect bluetooth lights keep on, and music work on speaker normally.

NFC Function:

If your phone have the NFC function, that you just put your phone to the sensor, (Where have the NFC sticker on the unit). It will be automatic connect, not need password.

RECORD FUNCTION:

Speaker can record the sound of music from microphone, FM radio, or AUX sound sources. and Save the record file in USB or SD card.

Operation as below :

- 1 .Put the USB or SD card on speaker.
- 2.Connect with microphone to speaker or turn to FM radio to play. or connect
AUX and play
- 3.Long press"Rec" button to record, after record finish, press 'Rec' again to save the file.
- 4.Press 'Play' to play the recorded file.

3-1 BACK PANEL FUNCTION INSTRUCTION

- 1.AUDIO INPUT:DVD/TV/ or other AUX AV player audio signal input jack
- 2.Switch for AUDIO INPUT, and switch for LED
- 3.110V/240 Switch: Voltage AC110V and AC 240V transfer switch
4. AC input: AC110V/240V input

4-1 USE INSTRUCTION


- 1.connect the signal cables according to the back panel connection instruction
- 2.To sure the correct the Voltage ,Insert electronic source cable, turn on the power switch button
- 3.Adjust function keys to your satisfied best sound effect.

5-1 PRODUCT EQUIPMENT LIST

- 1.Speaker -----1pc
- 2.Power cable -----1pc
- 3.Mp3 remote control---1pc
- 4.User manual-----1pc
- 5.AV cable-----1pc

6-1 BACK PANEL CONNECTION DIAGRAM

- 1.LED Power : Disco light ON/OFF
- 2.FM antenna: FM antenna
- 3.Audio Input: Audio Input
- 4.AC~110/240/50~60HZ: Connect to AC Power,
Please be sure connect to 110V/240V 50-60HZ.
outer range power may cause accident.
- 5.110V/240V : Adjust the voltage 110V or 240V

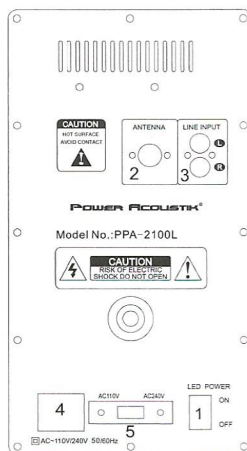

7-1 PRECAUTION

In order to prevent operating problems or serious damage to the device, please comply with the following remarks:

- 1.Hold the electric outlet while pulling out the plug. Do not pull the wire.
- 2.Operating audio appliances should be kept away from heating facilities.
- 3.Do not attempt to fix or revise the circuit.
- 4.Do not touch the internal parts, otherwise electric shock or serious damage to the device might cause.
- 5.Pull out the plug if not in use for long.
- 6.Ensure the audio product in a ventilated dry condition with about 20mm Space around as for heating dispersion.

Warning: Do not expose this appliance to rain or moisture, and vessel containing liquids, such as a cup, vase, is not supposed to be placed on or above the appliance.

8-1 TROUBLESHOOTING

Symptom	Possible Problem	Solution
No Function Light & No Sound	1.Plug is not well connected	Insert the plug into electric outlet
	2.Speaker power button is not turned on	Turn on the button
Function Light on but No Sound	1.Cable misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack
	2.Audio signal is not transmitted to Speaker	Check all the speakers if there is audio signal output

If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assumes no responsibility.

POWER ACOUSTIK®
www. Poweracoustik. com

Add:1550 S. Maple Ave. Montebello, CA 90640 USA

Phone: 323-722-3333

Fax: 323-722-1122

E-mail:warranty@poweracoustik.com